

H S SLIDER SYSTEM OPERATING INSTRUCTIONS

WARNING

FAILURE TO PROPERLY SECURE SLIDER BOX TO THE BODY RAILS CAN CAUSE LOSS OF VEHICLE CONTROL THAT CAN RESULT IN DEATH OR SERIOUS INJURY, AND PROPERTY DAMAGE.

TO RELOCATE THE SLIDER SUSPENSION:

1. Set the tractor and trailer brakes.
2. Remove the manual stop bar (if the option is available on this trailer) from behind the slider system and locate it at the desired position.
NOTE: When moving the slider system forward from a rearward position, locate the stop bar ahead of the intended position. When moving the slider system rearward from a forward position, locate the stop bar behind the intended position.
3. Raise the operating handle and lock in place. Gently rock the trailer forward and rearward to fully retract the pins.
4. Carefully slide the slider system to the desired location by releasing the tractor brakes and driving forward or rearward until the stop bar halts the movement of the slider box.
5. Lower the operating handle and lock in place. Visually check all locking pins for proper pin engagement. The chamfered ends of the locking pins must project through the body rail at all four locations.
6. Lock the manual stop bar in both body rails directly behind the slider system.
7. Check the slider system locking pins by applying the trailer brakes and gently rock the trailer forward and rearward.

2070 Industrial Place SE
Canton, Ohio 44707-2600 USA
Phone (330) 456-7288
Fax (330) 456-0105

 **HENDRICKSON**
Trailer Suspension Systems

A Boler Company

250 Chrysler Drive, Unit #3
Brampton, Ontario L6S 6B6 CAN
Phone (905) 789-1030
Fax (905) 789-1033

L104 Rev. D March 1999 Printed in United States of America.
Supersedes all previous versions of L104.

The Boler Company, Copyright © 1999
Hendrickson Trailer Suspension Systems
All Rights Reserved